





why! W670SZQ1 Fan Replacement

Written By: Felice Suglia


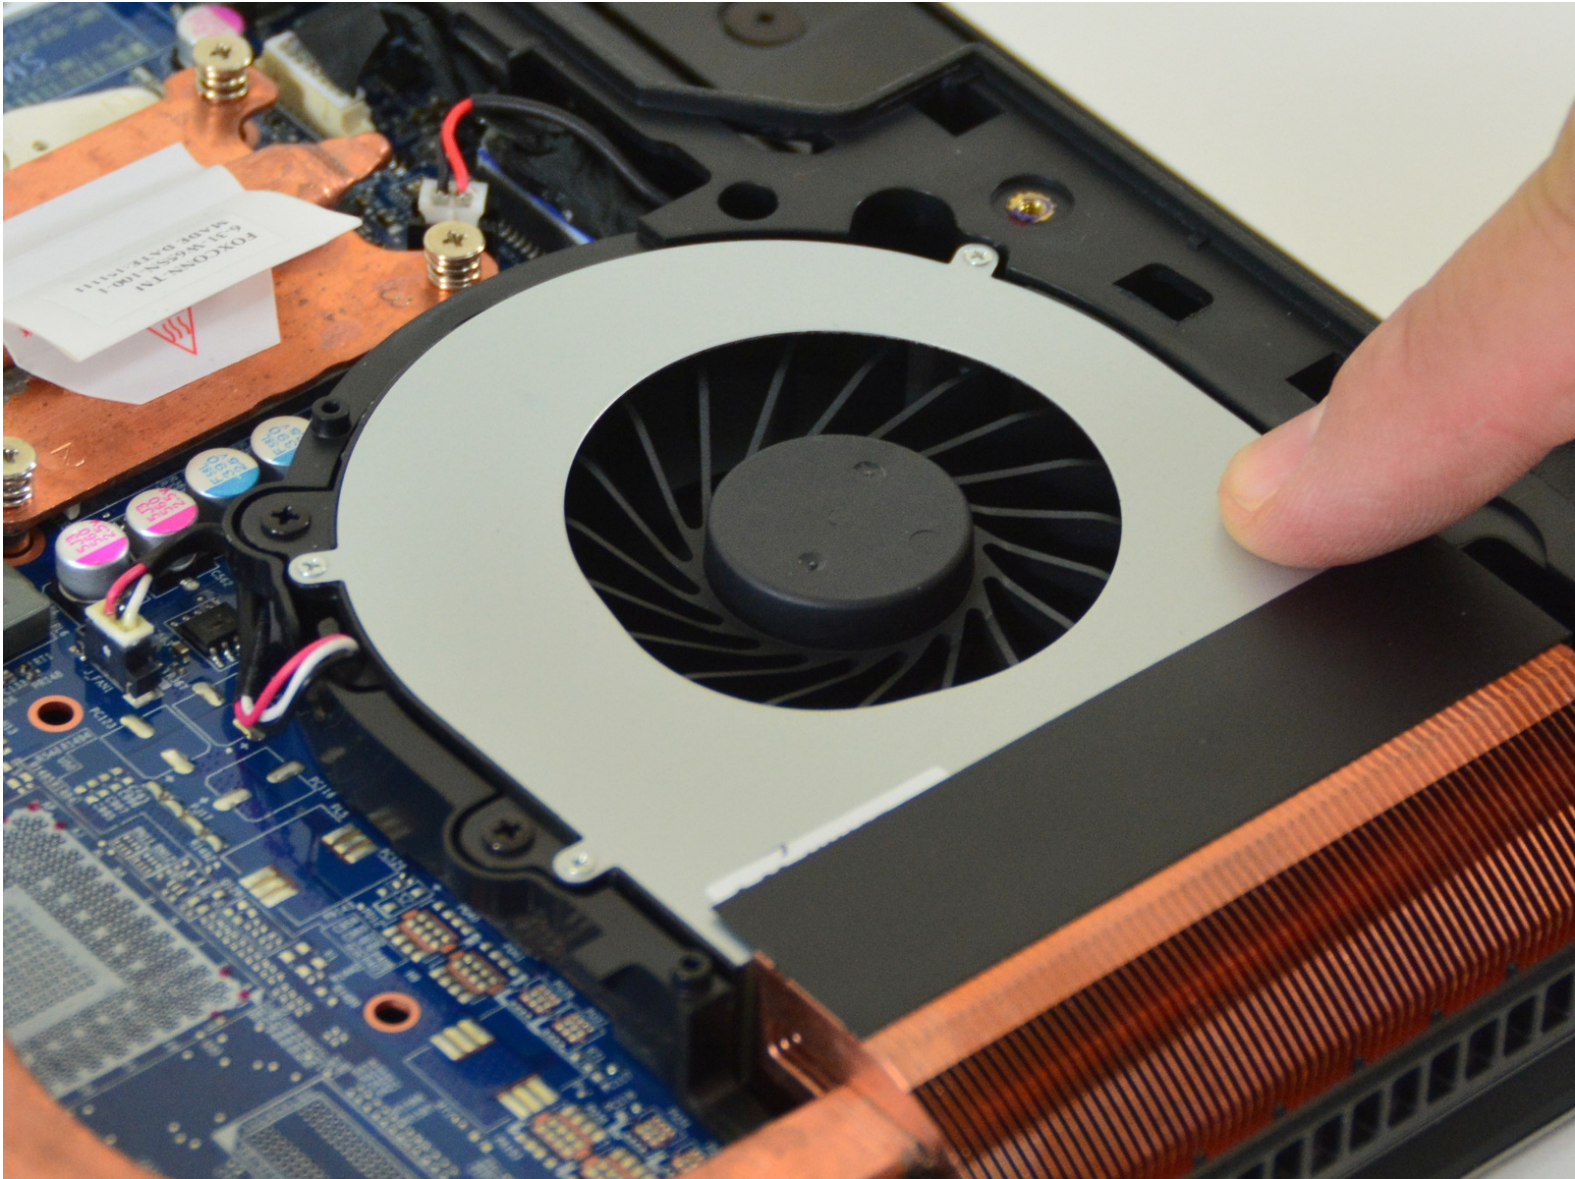


Step 1 — Battery

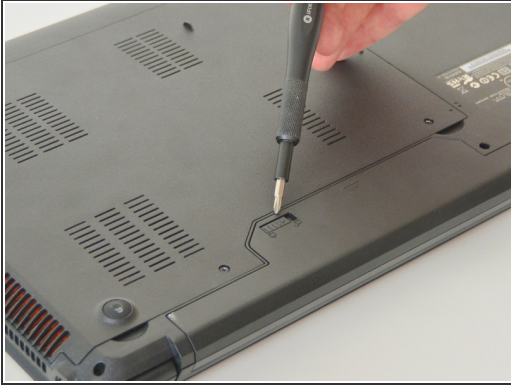




- Unlock the left latch.
- Unlock the right latch.
- Remove the battery while maintaining the unlocked latch.

Step 2 — Access to the Main Components

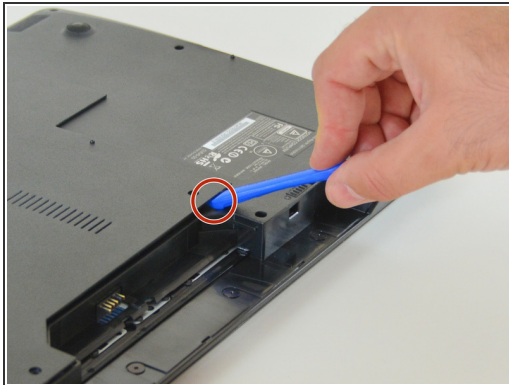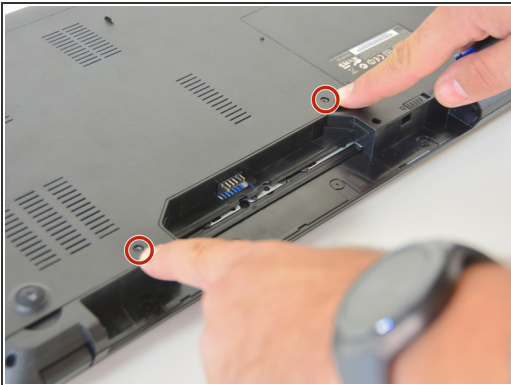

- Using the Philips screwdriver # 0, remove the 2 screws from the bottom cover.
- Lift the bottom right cover with the iFixit Opening Tool.
- Lift the cover lower left with the iFixit Opening Tool.
- Finally completely clear the lower cover to view the main components.

Step 3 — The fan

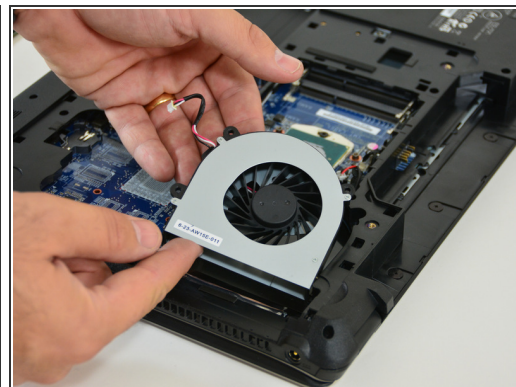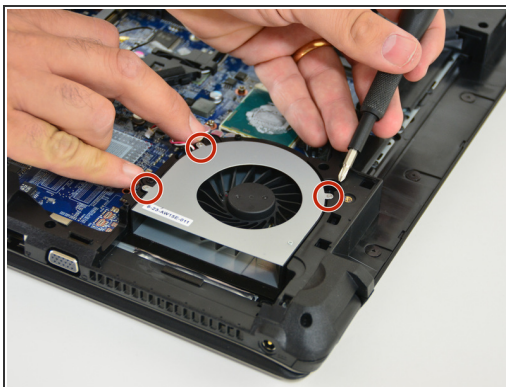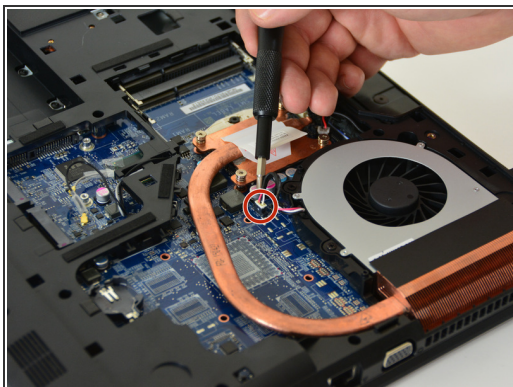

- First disconnect the fan power cable.
- Then unscrew the three screws that hold the fan in place.
- Finally release the fan by lifting its location.

Pour réassembler votre appareil, suivez les instructions dans l'ordre inverse.

This document was last generated on 2017-06-21 02:29:34 PM.